


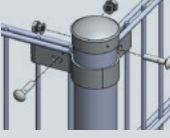
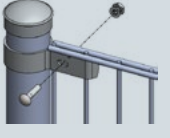
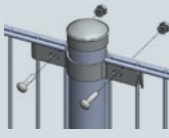

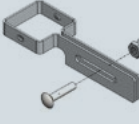
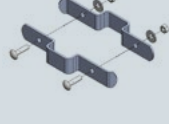
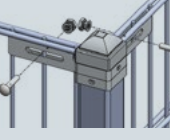
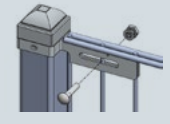
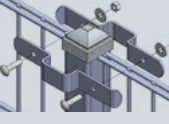


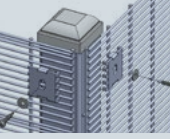
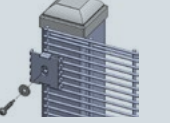

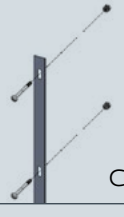
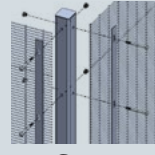
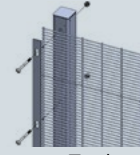


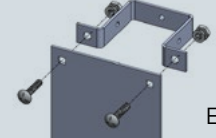

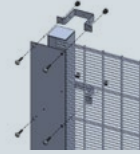
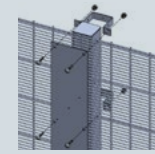


## WELDED WIRE BRACKETS

Bracket Type	Required Brackets	Notes	Bracket Image	Installation Image
<b>RAMPART 286 SINGLE WIRE, RAMPART 284 DOUBLE WIRE, RAMPART 280 DOUBLE WIRE</b>				
13 GA U-Clamp for: 2-3/8" (60 mm) Round Post	4' (1.2 m) high = 3 brackets/panel 6' (1.8 m) high = 4 brackets/panel 8' (2.4 m) high = 5 brackets/panel	1.5" carriage bolt with washer and 5/16-18" nut. Corner has to be a 90-degree angle. If not, use two end/universal brackets.	   <div> <div>Corner</div> <div>End/Universal</div> <div>Line</div> </div>	   <div> <div>Corner</div> <div>End/Universal</div> <div>Line</div> </div>
12-14 GA U-Clamp for: 2" (51 mm) Square Post 3" (76 mm) Square Post	4' (1.2 m) high = 3 brackets/panel 6' (1.8 m) high = 4 brackets/panel 8' (2.4 m) high = 5 brackets/panel	1.5" carriage bolt with washer and 5/16-18" nut. Use two end brackets for corner installation. 2" posts available in 4' & 6' only.	   <div> <div>Corner</div> <div>End</div> <div>Line</div> </div>	   <div> <div>Corner</div> <div>End</div> <div>Line</div> </div>
<b>RAMPART 358 SECURITY &amp; RAMPART 354 SECURITY</b>				
Spider Bracket for: 2-1/2" (64 mm) Square Post 3" (76 mm) Square Post	4' (1.2 m) high = 4 brackets/panel 6' (1.8 m) high = 6 brackets/panel 8' (2.4 m) high = 9 brackets/panel	Standard: #12 tamperproof self-tapping screw with 1/4" washer. Optional Upgrade: 8 mm stainless steel carriage bolt with 8 mm stainless steel break-away nut. 2-1/2" posts available in 4' & 6' only.	  <div> <div>Corner</div> <div>End/Line</div> </div>	   <div> <div>Corner</div> <div>End</div> <div>Line</div> </div>
<b>FLAT BAR SYSTEM</b>				
Defender Lite Bracket for: 3" (76 mm) Square Post	6' (1.8 m) high = 7 brackets/panel 8' (2.4 m) high = 9 brackets/panel	M8 carriage bolt with M8 break-away nut. 1.2" (30 mm) x .25" (6 mm) cover strip.	 <div> <div>Corner/End/Line</div> </div>	   <div> <div>Corner</div> <div>End</div> <div>Line</div> </div>
Defender Secure Bracket for: 3" (76 mm) Square Post	6' (1.8 m) high = 7 brackets/panel 8' (2.4 m) high = 9 brackets/panel	M8 carriage bolt with M8 break-away nut and .13" (3 mm) post bracket. 4.7" (120 mm) X .13" (3 mm) clamp bar. 5.0" (127 mm) x 5.0" (127 mm) x .13" (3 mm) corner clamp angle.	  <div> <div>Corner</div> <div>End/Line</div> </div>	   <div> <div>Corner</div> <div>End</div> <div>Line</div> </div>